 




User Manual

For V350 Series Appliances

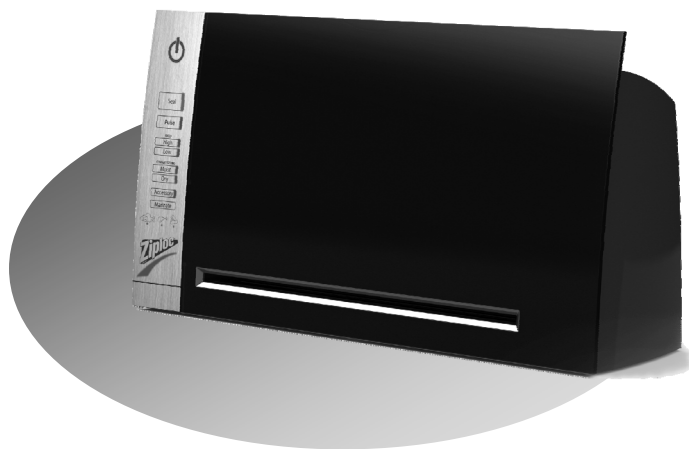

IMPORTANT SAFEGUARDS



 
Read and fully understand all instructions and warnings prior to using this machine. Your safety is most important! Failure to comply with procedures and safeguards may result in serious injury.

1. Read the instructions carefully.
2. Do not allow the appliance to be used as a toy.
3. This appliance should not be operated by children.
4. Do not operate the appliance with a damaged power cord or plug. Before each use, inspect power cord and plug for signs of damage.
5. Do not use the appliance on a wet or hot surface, or near a heat source.
6. Always use the appliance on a level surface.
7. Do not immerse any part of the appliance, power cord or plug into water or other liquid.
8. To disconnect, unplug the power cord from the electrical outlet. Do not disconnect by pulling on the cord. Always unplug the appliance before cleaning and when not in use.
9. Do not operate the appliance if it malfunctions or is damaged in anyway. If the cord or the machine is damaged, it must be returned to our customer service department. See warranty for more information.
10. Use the appliance only for its intended use.
11. Close supervision is required when this product is used near children.
12. The Appliance is not for commercial use. If sealing more than 20 bags or canisters continuously, wait at least 20 minutes before resuming use of your appliance.

This appliance is for HOUSEHOLD USE ONLY!

Do not attempt to service this product. Service should be performed by an authorized service representative. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords are not prohibited from being used when care is exercised in their use. When an extension cord is used the marked electrical rating of the extension cord shall be no less than the marked electrical rating of the appliance. The longer cord shall be arranged so that it does not drape over the counter-top or tabletop where it is capable of being tripped over, snagged, or pulled on unintentionally, especially by children.

POLARIZED PLUG



This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm, do not use the outlet.

WELCOME

Welcome and thank you for purchasing this Ziploc® Brand Vacuum Sealer! With the new Ziploc® Brand Vacuum Sealer, just close the lid firmly by pressing down on both sides, check to make sure that the lid will not open. If the lid cannot be lifted, then you have successfully locked the lid in place, press the vacuum seal button and let the vacuum sealer do the rest! The machine will continue to vacuum out air and then seal the bag; once it's done it even releases the bag automatically!

Your new Ziploc® Brand Vacuum Sealer System includes the following:

- V350/360/370 Series Food Sealer
- Registration Card
- Universal Adapter
- Accessory Hose (not included with models that have retractable hose)
- Bag and Roll Refill Samples (qty. and sampling will depend on model purchased)

VACUUM SEALING GUIDELINES

Food Storage & Safety

IMPORTANT: Vacuum packaging is NOT a substitute for refrigeration or freezing. Any perishable foods that require refrigeration must still be refrigerated or frozen after vacuum packaging.

For best results in extending the life of foods, it is important to vacuum package foods that are fresh. Once food has begun to deteriorate, vacuum packaging may only slow the deterioration process. Vacuum sealing cannot prevent the growth of mold. Other disease causing microorganisms can still grow in low oxygen environments and may require further measures to be eliminated. **Yeast** - The development of yeast can be slowed by refrigeration and completely stopped by freezing food at 0°F (-18°C). Yeast causes fermentation, which gives food an identifiable smell. **Bacteria** - Bacteria can grow rapidly in the "Danger Zone", the temperatures between 40°F and 140°F. Pathogenic bacteria cause illness and do not generally affect the taste, smell or appearance of food. They are rare, but can be very dangerous.

IMPORTANT: There are basic rules to follow when handling food: COOK, SEPARATE, CLEAN and CHILL.

Cook - It is crucial to cook food to a safe internal temperature to destroy bacteria that is present. Bacteria is not just a surface condition but can be found deep within the mixture of meats and other foods. **Separate** - Foods that will be eaten uncooked and foods that will be cooked before eating MUST ALWAYS be kept separate. Cross contamination can occur when raw foods (such as meats or eggs) come in contact with foods that will be eaten before or after cooking. Always use your Ziploc® Brand Vacuum Sealer Bags to ensure that juices won't drip onto fresh produce or other foods. **Clean** - Wash hands and work surfaces frequently when cooking. **Washing** with soap and water for at least 15 seconds, then dry with a paper towel. **Chill** - Chilling food is very important. To help preserve food safely, do not allow food to stand at room temperature for 2 hours or more, set your refrigerator to 40°F (4°C) or colder and your freezer to 0°F (-17°C). Freezing at 0°F does not kill microorganisms, but stops them from growing. For long-term storage, always freeze perishable foods that have been vacuum packaged and **keep refrigerated after.**

Food Preparation Hints and Tips for Air-tight Vacuum Sealing

Cooking, Thawing and Reheating - Simmering in a Ziploc® Brand Vacuum Sealer Bag helps food retain its flavor and it helps with the clean up as well. When reheating foods in the microwave that have been stored in Ziploc® Brand Vacuum Sealer Bags, puncture the bag to allow hot air to escape. You can also reheat foods in Ziploc® Brand Vacuum Sealer Bags by placing them in water at a low simmer below 170°F (75°C).

IMPORTANT: Always thaw food in either refrigerator or microwave - do not thaw perishable foods at room temperature.

Preparation Hints for Meat and Fish:

Pre-freeze meat and fish for 1-2 hours before vacuum packaging. This helps retain the juice and shape, providing a better seal. If you can't, place a folded paper towel between the food and top of the bag, but below seal area. Leave paper towel in bag to absorb excess moisture and juices during vacuum packaging process.

Preparation Hints for Cheeses:

Buy fresh and keep fresh, that's our motto!
Vacuum package cheese after each use. If you make your bag just a little longer than needed, you can re-seal the bag after each use.

IMPORTANT: Due to the risk of anaerobic bacteria, soft cheeses should never be vacuumed packaged.

Preparation Guidelines for Vegetables:

Mom always said "eat your vegetables..", we say blanch them. Blanching is a process that should be done before vacuum packaging. This process stops the enzyme action that could lead to loss of flavor, color and texture. To blanch vegetables, place them in simmering water or in a microwave until they are cooked, but still crisp. Blanching times can range from 1 to 2 minutes for leafy greens and peas; 3 to 4 minutes for snap peas, sliced zucchini or broccoli; carrots about 5 minutes; and 7 to 11 minutes for corn on the cob. After blanching, immerse vegetables in cold water to stop the cooking process.

NOTE: All vegetables (including broccoli, brussels sprouts, cabbage, cauliflower, kale, turnips etc.) naturally emit gases, during storage. Therefore, after blanching, it's best if they are stored in the freezer.

VACUUM SEALING GUIDELINES

More on Vegetables:

Vegetables are a great candidate for portion control; when storing vegetables, try pre-freezing them for 1 to 2 hours, then separate them into meal portions within your Ziploc® Brand Vacuum Sealer Bags. After they have been vacuum packaged, return them to the freezer.

IMPORTANT: Due to the risk of anaerobic bacteria, fresh mushrooms, onions & garlic should never be vacuum packaged.

Preparation Hints for Powdery Foods:

When vacuum packaging powdery items like flour, it's best to use their original packaging inside of the Ziploc® Brand Vacuum Sealer Bags. The fine powder could get sucked into the machine and cause enough damage to shorten the life of the sealer.

Preparation Hints for Liquids:

Before vacuum packaging liquids such as soup stock, pre-freeze in a casserole dish, loaf pan or ice cube tray until solid. Remove frozen liquid from the pan and vacuum package in a Ziploc® Brand Vacuum Sealer Bag. Then store in the freezer. When ready to use, simply cut the corner of the bag and place with the cut corner up in either a microwave dish or drop into water at a low simmer, below 170°F (77°C).

Preparation Guidelines for Healthy Make-Ahead Meals:

Ziploc® Brand Vacuum Sealer Bags are very effective in helping you plan and prepare healthy make-ahead meals. Check out the recipes contained on our website for additional ideas.

Vacuum Food Storage Guide*

Food	Stored In	Normal Shelf Life	Vacuum Shelf Life
Large cuts of meat: beef, poultry, lamb and pork	Freezer	6 months	2-3 years
Ground meat: beef, poultry, lamb and pork	Freezer	4 months	1 year
Fish	Freezer	6 months	2 years
Coffee beans	Pantry	4 weeks	16 months
Coffee beans	Freezer	6-9 months	2-3 years
Berries: strawberries, raspberries, blackberries	Refrigerator	1-3 days	1 week
Berries: cranberries, huckleberries, blueberries	Refrigerator	3-6 days	2 weeks
Cheese	Refrigerator	1-2 weeks	4-8 months
Cookies, crackers	Pantry	1-2 weeks	3-6 weeks
Flour, sugar, rice	Pantry	6 months	1-2 years
Lettuce	Refrigerator	3-6 days	2 weeks
Nuts	Pantry	6 months	2 years
Oils with no preservatives, like safflower, canola, corn oil	Pantry	5-6 months	1-1.5 years
Wine	Refrigerator	1-3 weeks	2-4 months

Table adapted from Dr. G.K. York, Dept. of Food Science & Tech., University of California, Davis

* Only use information on this table as a guideline! Actual storage life may vary. Check all food for spoilage before use.

**FOOD STAYS
FRESHER LONGER
WHEN YOU
VACUUM SEAL!**

VEGETABLE BLANCHING CHART

Vegetable Blanching Chart	
Blanching time is in boiling water.	
Unless otherwise noted, the chilling time should be the same as the blanching time	
Vegetable	Blanching Time (minutes)
Artichoke-Globe (Hearts)	7
Artichoke-Jerusalem	3-5
Asparagus	
Small Stalk	2
Medium Stalk	3
Large Stalk	4
Beans-Snap, Green, or Wax	3
Beans-Lima, Butter, or Pinto	
Small	2
Medium	3
Large	4
Beets	cook
Broccoli (flowerets 1 1/2 inches across)	3
Steamed	5
Brussel Sprouts	
Small Heads	3
Medium Heads	4
Large Heads	5
Cabbage or Chinese Cabbage (shredded)	1 1/2
Carrots	
Small	5
Diced, Sliced or Lengthwise Strips	2
Cauliflower (flowerets, 1 inch across)	3
Celery	3
Corn	
<i>Corn-on-the-cob</i>	
Small Ears	7
Medium Ears	9
Large Ears	11
<i>Whole Kernel or Cream Style</i> (ears blanched before cutting corn from cob)	4

This document was extracted from "So Easy to Preserve", 5th ed. 2006. Bulletin 989, Cooperative Extension Service, The University of Georgia, Athens. Revised by Elizabeth L. Andress, Ph.D. and Judy A. Harrison, Ph.D., Extension Foods Specialists.

VEGETABLE BLANCHING CHART

Vegetable Blanching Chart	
Blanching time is in boiling water.	
Unless otherwise noted, the chilling time should be the same as the blanching time	
Vegetable	Blanching Time (minutes)
Eggplant	4
Greens	
Collards	3
All Other	2
Kohlrabi	
Whole	3
Cubes	1
Mushrooms	
Whole (steamed)	5
Buttons or Quarters (steamed)	3 1/2
Slices (steamed)	3
Okra	
Small Pods	3
Large Pods	4
Peas-Edible Pod	1 1/2-3
Peas-Field (blackeye)	2
Peas-Green	1 1/2
Peppers-Sweet	
Halves	3
Strips or Rings	2
Potatoes-Irish (New)	3-5
Rutabagas	3
Soybeans-Green	5
Squash-Chayote	2
Squash-Summer	3
Sweet Potatoes	cook
Turnips or Parsnips	
Cubes	2

This document was extracted from "So Easy to Preserve", 5th ed. 2006. Bulletin 989, Cooperative Extension Service, The University of Georgia, Athens. Revised by Elizabeth L. Andress, Ph.D. and Judy A. Harrison, Ph.D., Extension Foods Specialists.

FEATURES OF YOUR ZIPLOC® BRAND PRODUCT

(Note: some features may vary slightly by model)

Power Button

Energizes unit from Power Saver mode.

Seal Button

Used for creating bags from roll material and for resealing open bags.

Pulse Button

Used for controlling amount of air removed from bag.

Speed Settings

High/Low, controls vacuum pump speed.

Content Settings

Moist/Dry, controls seal bar(s) for bags that contain moisture.

 
Accessory Button

De-energizes seal bar when using canisters or other accessories.

Marinate Button

Used in conjunction with Ziploc® Brand marinating canister for pre-programmed vacuum cycles.

Status Indicator

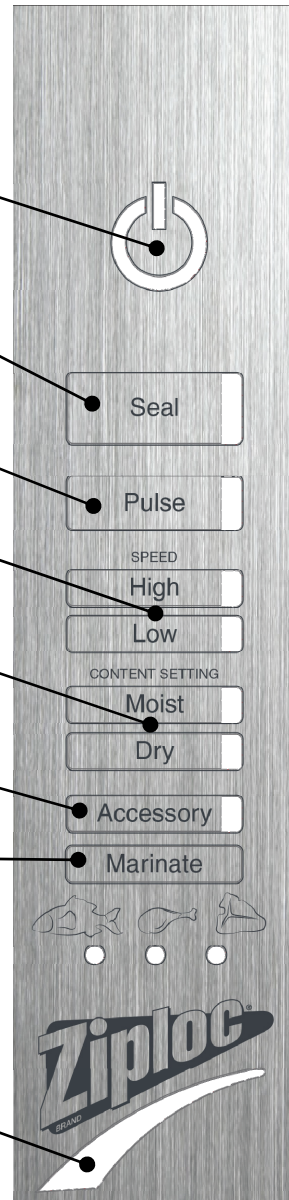

ROLL & ACCESSORY STORAGE

Built-In Roll & Accessory Storage

Conveniently store your vacuum system materials directly in your Ziploc Brand Vacuum Sealer System! No more worrying about where to store your roll, or where your canister adapter is located. Simply place these items into the storage compartment for easy access. When you need them, they'll be ready to use.



BAG CUTTER

Built-In Bag Cutter

Simplifies the creation of custom size bags and eliminates the need to find a knife or a pair of scissors! Create any bag size from a quart bag to a gallon bag or anything in between simply by pulling out enough bag material to the correct length and then sliding the bag cutter across the bag material. Easy and fast!



MOIST & DRY FEATURES

Adjustable Food Settings

 
For optimal vacuuming and sealing of moist or juicy foods and fresh meats, press the MOIST Food Setting Button so that the MOIST Indicator Light is illuminated. Choose the DRY food setting for foods without liquid.



ACCESSORY HOSE

Accessory Hose


The Ziploc Brand Vacuum Sealer System has a convenient accessory hose port for you to use when storing items in canisters or other accessory items. Simply open the accessory hose port door and insert one end of the accessory hose into the port opening. The other end can be used in conjunction with our patented Universal Adapter, or directly with certain canister or bottle ports. Make sure you give the specially designed hose ends a slight twist, this way you ensure that you have a tight fit. **CAUTION:** Make sure you refer to our Vacuum Sealing Guidelines for proper storage of different foods.

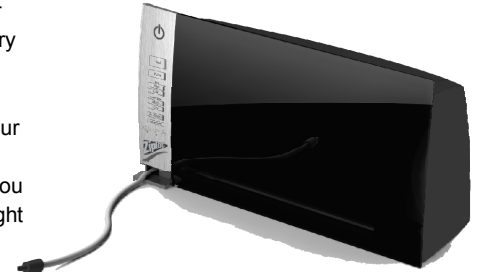

HIGH & LOW SETTINGS

Adjustable Speed Settings

 When vacuum sealing delicate items, press the LOW Vacuum Speed button so that the LOW speed indicator light is illuminated. For more control you may press the SEAL Button at any time to stop the vacuum and begin the automatic sealing process. Note: The appliance will default to the HIGH speed setting when power has been interrupted.

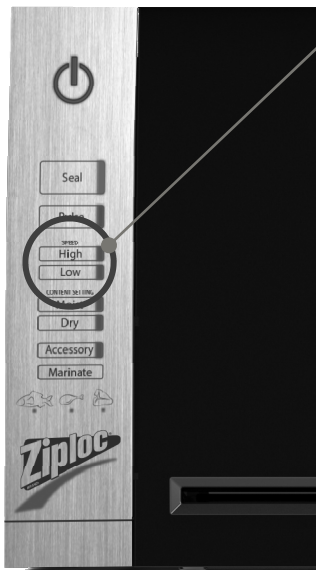

REMOVABLE CARRIAGE

Removable Carriage

The V350/360/370 series vacuum sealer systems come equipped with a patented carriage that can be removed for cleaning.



CLEANING THE REMOVABLE CARRIAGE

Cleaning the Removable Carriage

Please follow these simple steps to ensure proper usage:

1. Unplug before cleaning.
2. Open the vacuum sealer door by sliding the door upward.
3. Depress release latch (see fig. X) to release vacuum carriage.
4. Remove carriage from unit and open so that both sides lay flat on countertop.
5. Empty vacuum chamber of any liquids or food material.
6. Check gasket materials to ensure that they are free from food material and that they are seated properly within the channel.
7. Wash with soapy warm water the upper and lower vacuum chambers, taking care not to damage the bag sensor. Make sure you dry each chamber completely as the liquid sensors may interfere with the machine operation if liquids are allowed to remain in the vacuum chamber. **NOTE: The V350 series machines have a liquid detection system that prevents liquids from building up in the vacuum chamber. When liquids build up, the machine will turn off and flash the Ziploc swoosh in red.**
8. To resume normal operation, replace vacuum carriage back into the machine until you hear an audible "Click" then close sealer door.

CORD WRAP

Cord Wrap

The V350/360/370 series Ziploc® Brand Vacuum Sealer System comes with a convenient cord wrap feature under the base. Wrap any excess cord within this area to keep your countertops clean and clutter free.



HOW TO MAKE CUSTOM SIZE BAGS

HOW TO MAKE CUSTOM SIZED BAGS FROM ROLL MATERIAL:

1. Open storage compartment door and place roll into Roll Storage area. (For Best results, insert roll with material flap down.
2. Lift up Bag Cutter Bar and place bag material beneath the cutter bar.
3. Pull out enough bag material to hold item being vacuum packed, plus 3 inches. Lower the Cutter Bar and slide Bag Cutter across the Cutter Bar.
4. Press Seal Button.
5. Using two hands, insert open end of bag into vacuum sealer door opening until clamp motor starts. Bag must be centered.
6. When red seal light turns off, sealing is complete. You may remove bag.
7. You now have one sealed end and you are ready to vacuum seal with your new bag.



NOTE: Make sure you give the appliance time to cool down. Wait at least 20 seconds between seals. Under heavy usage, the appliance will shut off automatically to prevent overheating. If it does, wait 20 minutes to allow the appliance to cool down. The appliance is not for commercial use. If sealing more than 20 bags or canisters consecutively, wait at least 20 minutes before resuming use of your appliance.

HOW TO VACUUM SEAL WITH ZIPLOC® BRAND VACUUM SEALER BAGS

HOW TO VACUUM SEAL USING YOUR V350/360/370 SERIES MACHINE

1. Begin with a Ziploc® Brand Vacuum Sealing System Bag (or create a bag as described in the "How to Make a Custom Sized Bag from Roll Material"). **Note:** *Other branded vacuum sealer refill bags can be used with your Ziploc® Brand Vacuum Sealer System, but results may vary as the system is designed specifically for use with Ziploc® Branded Vacuum Sealer products.*
2. Place item(s) in bag, allowing at least 3 inches of space between bag contents and top of bag.
3. Using two hands, insert open end of bag into Vacuum Channel until **clamp motor starts**.
4. The vacuum progress lights will illuminate.
5. **Continue to hold bag until vacuum pump starts. You may now release bag.** **Note:** *To prevent crushing delicate items, you may press Seal Button at any time to begin automatic sealing process.*
6. When red Seal Light turns off, remove bag.



HOW TO USE YOUR ZIPLOC® BRAND VACUUM SEALER WITH A CANISTER

NOTE: *Canister is not included, accessory hose may not fit all canister lids.*

1. Clean and wipe the canister cover and canister base to make sure they are clean and dry.
2. Place food into the canister and leave at least one inch of space between the food and the cover.
3. Place the cover onto the canister.
4. Insert one end of the accessory hose into the accessory port on the appliance.
5. Insert the opposite end of the accessory hose into the accessory port on the canister or on the accessory adapter.
6. Close the lid by pressing down firmly on both sides. Check to make sure that the lid will not open. If the lid cannot be lifted, then you have successfully locked the lid in place.
7. To begin the vacuum process, press the **Vacuum and Seal button**. The unit will continue to vacuum and then seal once the air has been removed.
8. Once the indicator light has turned off it is safe to remove the accessory hose from the canister and the machine.

CARE AND CLEANING

1. Risk of Electric Shock: Always unplug the unit before cleaning.
2. **DO NOT IMMERSE IN WATER!**
3. Do not use abrasives to clean the unit.
4. Wipe the outer surfaces with a soft, damp cloth and mild soap.
5. To clean the inside of the unit, wipe away any food or liquid with a clean paper towel.
6. Dry all parts thoroughly before you plug the unit in and operate.

HELPFUL HINTS

1. **Store Safely!** Store your Ziploc® Brand Vacuum Sealer System with the lid unlocked to prevent damage to the vacuum gaskets.
2. **Take Your Vitamins With You When Traveling!** When traveling, take your vitamins along with you without the bulk of bottles! Simply use your Ziploc® Brand Vacuum Sealer System and vacuum rolls to make pint sized vitamin pack bags to save on room and to keep all your vitamins pre-packed in your daily dose.
3. **Remember the TSA's 3-1-1 rule for Carry-Ons when flying!** When you travel, vacuum seal your liquids in a 1 quart clear sided bag using your Ziploc® Brand Vacuum Sealer System and quart size pre-cut vacuum bags and rolls.
4. **Stay Dry Outside!** On your trips to the beach, on a boat or simply camping, vacuum seal your cell phone and important electronics and paper items to keep them dry! Use your Ziploc® Brand Vacuum Sealer System and quart or gallon size pre-cut vacuum bags and rolls to protect your important electronics and other items even when it is raining outside!

NOTES

TROUBLESHOOTING

PROBLEM	SOLUTION
Nothing happens when I insert the bag.	<ul style="list-style-type: none"> Make sure the power cord is correctly plugged in to the electrical outlet. Make sure the power cord is not damaged in any way. Make sure the electrical outlet is working by plugging in another appliance. If it is not working please check the circuit breakers or fuses in your home. Make sure the bag is positioned correctly as far as it will go in the opening on the door. Make sure there are no red LED lights blinking. If there are LEDs blinking, refer to Error Codes below. Make sure the POWER button is not blinking. If it is blinking, remove the bag and press the POWER button to put the unit in ACTIVE mode. Make sure that the ACCESSORY LED (if equipped) is not lit. If the ACCESSORY LED is lit, press POWER to reset unit to ready mode. Wait 20 minutes to allow the appliance to cool off, then try using it again.
Air is not vacuumed from the bag	<ul style="list-style-type: none"> Check that there are no gaps, folds, wrinkles or holes in the pre-sealed bag. Check for loose, worn or cracked upper and lower sealing gaskets by carefully removing the carriage and cleaning the unit. Follow instructions in this manual on how to correctly remove the carriage from the unit. Make sure there are no red LED lights blinking. If there are LEDs blinking refer to Error Codes below. Make sure the POWER button is not blinking. If it is blinking, remove the bag and press the POWER button to put the unit in ACTIVE mode. Make sure that the ACCESSORY LED light (if equipped) is NOT lit. If the ACCESSORY LED is lit, press POWER to reset unit to ready mode. Foods with high liquid contents may prevent the bag from sealing properly. Cut bag open and wipe top inside of bag and reseal using the MOIST Food Content Setting (if equipped). Check to see if bag is properly inserted in to the Vacuum Channel. Make sure you've placed the bag in the proper place. When making a bag from a roll, make sure end of cut piece is on the Sealing Strip.
Bag Melts	<ul style="list-style-type: none"> The Sealing Strip may have been too hot during the sealing process. Allow the unit to cool for 20 seconds between uses. If the bag continues to melt, allow unit to cool with the lid in the upright position for 20 minutes before using.
Air has seeped back in to the vacuumed bag	<ul style="list-style-type: none"> Check the seal of the bag. There may be a hole or wrinkle that is allowing air to re-enter the bag. Carefully cut the bag open and re-seal it, or use an entirely new bag. Make sure there is no moisture or liquid from the food present within the bag seal. You may need to cut open the bag and re-seal it, or use an entirely new bag. Partially freeze foods with excess liquids, prior to vacuum sealing. Make sure there are no food items with sharp edges that may have punctured the bag. If you find a puncture hole, seal the item in an entirely new bag. Make sure no liquids were drawn to the sealing strip area. Check for loose, worn or cracked upper and lower sealing gaskets. Moisture of foods with high liquid content will prevent the bag from sealing properly. Cut bag open and wipe the inside of the bag, and re-seal.
Bag will not seal	<ul style="list-style-type: none"> Check that there aren't any gaps, folds, wrinkles or holes in pre-sealed edges. Moisture of foods with high liquid content will prevent the bag from sealing properly. Cut bag open and wipe top inside of bag and re-seal. Make sure you've placed the bag in the proper place. When making a bag from a roll, make sure end of cut piece is on the Sealing Strip. Make sure you've given the appliance time to cool down. Wait 20 seconds between seals.
Error Codes (red, blinking LEDs)	<ul style="list-style-type: none"> Identified by red blinking LEDs on the control panel. Indicates a safety switch is not activated on the unit. Error Code Identification: <ul style="list-style-type: none"> BAG DETECT: Continuous blinking red LED light. The unit has detected that there is no bag in the vacuum channel, or the bag was removed during the normal automatic process. Remove and re-insert bag to reset OR remove bag and press POWER button once to reset. LIQUID DETECT: Blinking red LED light (5 times), then pause, then blinking. Liquid has been detected in the vacuum channel. Unplug unit, remove bag, open door and carefully eject the vacuum carriage from the unit. Open carriage and carefully wipe out excess liquid from vacuum channel and clean. Once cleaned, close carriage and re-insert into unit until a "click" is heard. Close door. Plug unit back in and press POWER to activate unit. If error is cleared, only blue LED lights will be seen. Re-insert bag and let process begin for sealing. DOOR OPEN: Blinking red LED light (3 times), then pause, then blinking. Unit has detected that the door is open and unit will not operate. Make sure that main door is closed. Once door is closed, LED light should change to blue. Re-insert bag and continue process.



Thank You!

Remember to pick up your Ziploc® Brand Vacuum Sealer System bag and roll refills at your local retailer.



Ziploc® Brand Vacuum Sealer Rolls are available in sizes 11IN x 16FT (27.9cm X 4.9m) & 8IN x 20FT (20.3cm x 6.09m). Ziploc® Brand Vacuum Sealer Bags are available in gallon size & quart size.

SERVICE INSTRUCTIONS

1. Do not ATTEMPT to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the Warranty.
2. If you have any questions or comments regarding the unit's operation or believe any repair is necessary, please contact our Customer Service Department:

CTi Industries Corporation
22160 N. Pepper Road
Lake Barrington, IL. 60010

1 YEAR LIMITED WARRANTY

CTi Industries Corporation warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. CTi, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is intended and valid solely for the original retail purchase, and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. CTi dealers, service centers, or retail stores selling CTi products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions and disassembly repair or alteration by anyone other than CTi or authorized CTi service center. Further, the warranty does not cover: damage to the unit caused by immersion in water or liquid, or from dropping.

What are the limits on CTi's liability?

Except to the extent prohibited or limited by applicable law, and except as expressly provided herein, CTi DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Except to the extent prohibited or limited by applicable law, CTi shall not be liable or responsible for loss, injury or damage of any kind arising from the purchase, use, misuse, or inability to use the product, or the breach of any warranty provided herein, including without limitation, incidental, exemplary, special or consequential damages, or loss of profits, and the sole remedy of the purchaser of the product with respect to any breach of warranty shall be the remedy specifically provided for herein.

How to Obtain Warranty Service:

In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-888-723-5198 and a convenient service center address will be provided to you.

In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-888-723-5198 and a convenient service center address will be provided to you.

Bags and Rolls: CTi makes no warranty, expressed or implied, written or oral, including that of merchantability or fitness for any particular purpose with respect to bags and rolls.

In the United States, this warranty is offered by CTi Industries Corporation located in Lake Barrington, Illinois 60010. If you have any other problem or claim in connection with this product, please write our Customer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO THE ADDRESS LISTED ABOVE OR TO THE PLACE OF PURCHASE.**

Questions?

Contact customer service at

1-888-723-5198

Or visit www.CTiIndustries.com/Ziploc

SAVE THESE INSTRUCTIONS! Refer to them often.

© 2011 CTi Industries Corporation. All rights reserved. Ziploc® is a registered trademark of S. C. Johnson and Son, Inc. used under license.

Distributed by CTi Industries Corporation, Lake Barrington, Illinois 60010.

Printed in China